


SAECO PHEDRA CAPPUCINO


Information for the correct use of cappuccinatore

Daily cleaning: semi-automatic cleaning cycle


1 Take 2 containers with a capacity of 500cc each.

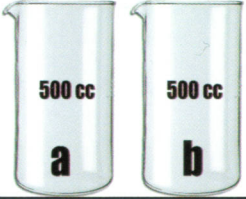


2 In one of the two containers prepare the liquid solution "Saeco powder pack for milk circuit" for cleaning cappuccinatore, diluting the powder in 400cc of water.




3 Remove the pipe of silicone from its container and put it into the container of the solution previously prepared (see point 2).

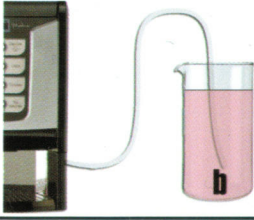


4 Press the last 2 buttons at the same time (button 4 and button 8) and follow the instructions shown on the display.




5 Place the empty container in the dispensing area, wait for the time needed for the emptying of the solution. Now is running the cleaning and sanitation of the circuit of cappuccinatore.

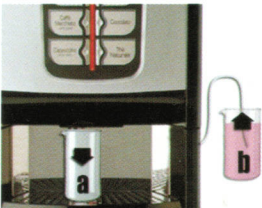


6 After the dispensing of the solution, empty the container placed in the dispensing area and replace it at the same point.

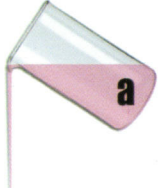


7 Remove the pipe of silicone from the container of solution, rinse it carefully and fill it with 400cc of cold water; immerse the pipe into the container.

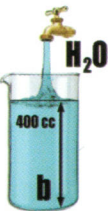


8 Press the last 2 buttons at the same time (button 4 and button 8) and wait for the final washing.



9 After dispensing, empty the container of water.



10 Now the machine is clean and ready to be used again.



The following operations must be conducted with the machine turned on and under pressure. We recommend to execute this cleaning cycle for a period of inactivity of more than 8 hours.



The non-execution of daily cleaning could undermine the proper functioning of the machine and be harmful to health.